

HAIR DRYER



Art. 20221012

Instruction manual

- Before using the device for the first time, read through the operating manual carefully and ensure you comply with the safety instructions!
- The device should only be used as described in these instructions.
- The manufacturer or dealer is not liable for damages arising from any use contrary to the intended purpose.
- Keep these instructions for reference.
- If you pass the device on to someone else, please include these instructions.

Warnings in these instructions

If necessary, the following warnings will be used in these operating instructions:

DANGER!
High risk: Failure to observe this warning may result in injury to life and limb.

WARNING!
Moderate risk: Failure to observe this warning may result in injury or serious material damage.

CAUTION:
Low risk: Failure to observe this warning may result in minor injury or material damage.

NOTE: Circumstances and specifics that must be observed when handling the device.

1. Safety instructions

Intended purpose

The hair dryer is intended exclusively for drying and styling real human scalp hair.

The device is designed for private home use and must not be used for commercial purposes. The device must only be used indoors.

Foreseeable misuse

Do not use the hair dryer for drying other body parts, animals or objects. Do not use the device for artificial hair.

Instructions for a safe operation

- This device can be used by children from the age of 8 and people with restricted physical, sensory or intellectual abilities or people without adequate experience and/or understanding, if they are supervised or instructed on how to use this device safely and if they are aware of the resulting risks.
- Children must not play with the device.

- Cleaning and user maintenance must not be performed by unsupervised children.
- Keep the device and accessories out of children's reach.
- Children younger than 8 years must be kept away from the appliance and power supply cord.
- Do not use this appliance in the vicinity of bathtubs, showers, washbasins or other vessels containing water.
- If the device is used in a bathroom, the plug must be pulled out after use, as the proximity of water represents a hazard, even when the device is switched off.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Installation of a residual current device (FI/RCD) with a rated residual operating current of no more than 30 mA is recommended to provide additional protection. Ask your electrician for advice. The installation should only be carried out by a qualified electrician.

DANGER for children

- Children must not play with packaging material.
- Do not allow children to play with plastic bags.
- Danger of suffocation!

DANGER! Risk of electric shock due to moisture

- Never put the device down in such a way that it could fall into water while still connected.
- Protect the device from moisture, dripping water or splash water.
- Never touch the device with wet hands.
- The device, the cable and the mains plug must not fall into water or other liquids.
- If the device has fallen into water, pull out the mains plug immediately, and only then remove the device from the water. Do not use the device again, but have it checked by a specialist.
- Should liquid get into the device, pull out the mains plug immediately. Have the device checked before operating it again.

DANGER of electric shock

- Do not operate the device if it or the cable shows visible signs of damage or if the device has been dropped.
- Only connect the mains plug to a properly installed socket, which is easily accessible and supplies voltage matching the rating plate. The socket must still be easily accessible after connection.
- Ensure that the cable cannot be damaged by sharp edges or hot surfaces. Do not wrap the cable around the device (cable break danger!).
- Make sure the cable is not trapped or crushed.
- Always pull on the plug and never on the cable when removing the device.
- Remove the mains plug from the socket, ...
... after each use,
... if a fault occurs,
... when you are not using the device,
... before cleaning the device and
... during thunderstorms.
- Never attempt to remove dust or foreign bodies from inside the device using pointed objects (e.g. a tail comb).
- To avoid any risk, do not make any changes to the device or accessories. Do not replace the cable yourself either. Repairs must only be carried out by a specialised company.

DANGER - Fire hazard

- Never leave the device unattended while plugged in.
- Never cover the device or place it on soft objects (e.g. bath towels).
- Ensure that the air inlet and air outlet are always free. Keep the air inlet free from long hair or objects that could get sucked into it.
- This device has an overheating protection system. In the event of overheating, e.g. if the air inlet or air outlet is covered, the device switches itself off automatically. If this occurs, set the on/off switch to ⏻ (off), pull out the plug from the mains socket, and allow the device to cool adequately. Before switching it back on, ensure that there are no hairs or foreign bodies blocking the air inlet.
- Do not switch on the device at the same time as another device with high power consumption plugged in to the same multiple socket.
- Do not use an extension cable.

DANGER of burns

- Do not direct the hot air flow at eyes, hands or other parts of the body that are sensitive to heat.
- Do not touch the hot surface of the device.
- Allow the device to cool down completely before you clean it or put it away.

WARNING! Risk of injury

- Place the cable in such a way that no one trips over it or steps on it!

CAUTION! Risk of material damage

- Never place the device on hot surfaces (e.g. hob plates) or near heat sources or open fire.
- Do not use any harsh or abrasive cleaning agents.
- Do not expose the device to temperatures below -10 °C or above + 40 °C.

2. Overview

NOTE! Check that the appliance is undamaged.



- 1 Air intake grille (with protective fins)
- 2 Hanging loop
- 3 Cord with mains plug
- 4 On/off switch and switch for power settings:
0 (off)
1 (slow airflow)
2 (fast airflow)
- 5 Switch for hot air settings
I (low) / II (medium) / III (high)
- 6 COOL SHOT (cold air flow)
- 7 Air outlet grille (with protective fins)
- 8 Styling nozzle (rotatable and removable)

3. Operation

NOTE: Before using for the first time, switch the device on for a few minutes and allow it to run at the highest speed and temperature settings. As a result of the manufacturing process, a slight odour may be produced. This is not harmful and only occurs during initial use. Ensure that the room has good ventilation.

Switching the appliance on/off and controlling the air flow

1. Insert the mains plug into an easily accessible socket.
2. The on/off switch and switch for the power settings (4) allows you to switch the device on and select the desired power setting:
0 (off)
1 (slow air flow)
2 (fast air flow)
3. After drying, set the on/off switch to 0 (off) and pull out the mains plug.

Selecting the temperature

The switch for the hot air settings (5) allows you to select the desired temperature for the air flow:

I = low temperature II = medium temperature III = high temperature

"COOL SHOT" cooling function

The hair section styled with hot air can be cooled to improve the durability of your hairstyle.

- Press and hold the "COOL SHOT" button (6) to activate the cooling function. A cool airflow is provided as long as the "COOL SHOT" button is being pressed and held.

4. Cleaning

DANGER!

Before cleaning, pull out the mains plug and allow the device to cool down.

WARNING!

Do not use any harsh or abrasive cleaning agents.

Clean the device regularly. Be particularly sure to check that the air inlet and air outlet are free from dust, hairs and fluff.

- Wipe down the casing and the safety mesh over the air inlet with a slightly damp cloth.
- Remove the styling nozzle from the hair dryer. Hold the hair dryer with the **air outlet grille (7)** facing downwards. Clean the protective fins using a brush.
- Hold the hair dryer with the **air inlet facing** downwards. Clean the safety mesh with a brush.

5. Technical data

Article no.	20221012
Mains voltage	220–240V ~ 50–60 Hz
Protection class	□ II
Output	1800–2200 W
Ambient temperature	-10 °C to +40 °C

In the interest of product improvements, we reserve the right to make technical and optical changes to the device and accessories.

6. Conformity

CE The CE mark was applied in accordance with the corresponding European directives.

The conformity declaration is held by the distributor:

Aquarius Deutschland GmbH
Am Mühlenturm 1 · 40489 Düsseldorf · DEUTSCHLAND

This is not a service address. Please see the "Warranty – Service" section.

7. Disposal

This symbol indicates that the product must be disposed of in a separate waste collection within the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.

Packaging

If you want to dispose of the packaging, make sure you comply with the environmental regulations applicable in your country.

8. Warranty – Service

Dear customer:

As a matter of course, this article is provided with the statutory warranty period of two years.

In terms of the warranty handling, please consult the seller of the goods. Within the framework of the statutory provisions, a defect exists if it can be attributed to material, processing or construction defects. Excluded are damages resulting from natural wear and tear, wrong care or improper use. If you need help in using the article or would like to receive further product information, you may visit our service platform www.aquarius-service.com.

NOTE: The operating instructions for this product are available as PDF on www.aquarius-service.com.